



NOYES® Mandrels

For use with 62.5 and 50 µm Multimode Test Jumpers with 3 mm Jackets

TIA/EIA-568-B specifies that attenuation (insertion loss) measurements of multimode fiber links, for all applications, must be made using an overfilled light source, such as an LED, with a mandrel-wrap mode filter on the transmit jumper. A key advantage of this specification is that it allows the use of existing overfilled LED light sources to certify both 50 and 62.5 µm fiber links for current and planned high bit rate applications including Gigabit Ethernet and 10 Gigabit Ethernet.

To meet the new multimode light source requirements in TIA/EIA-568-B, we offer mandrels for 50 and 62.5 µm test jumpers with 3 mm jackets. Both mandrels have grooves to ensure that jumpers are wrapped exactly five times (as specified by TIA/EIA-568-B) and can be easily attached to test jumpers in seconds without tools or tape.

Features

- Required by TIA/EIA-568-B to measure attenuation on multimode fiber links
- Enables certification of multimode links for Gigabit and 10 Gigabit Ethernet
- Allows existing 850/1300 nm LED light sources to test 50 and 62.5 µm links
- Attaches to 3 mm jumpers in seconds, without tools or tape
- May be reused indefinitely

Ordering Information

Mandrels for Jumpers with 3 mm Jackets:


DESCRIPTION	AFL NO.
Kit with two mandrels: 62.5 and 50 µm fiber	5400-00-0900
Mandrel, 62.5 µm fiber	5400-00-0201
Mandrel, 50 µm fiber	5400-00-0202

Example Procedure

The following procedure illustrates how to make attenuation measurements of multimode fiber links using an LED light source, optical power meter, and mandrels. The procedure assumes that the link under test is terminated by ST connectors at both ends. However, it can easily be adapted for links terminated by other connector types simply by using the appropriate test jumpers and adapter caps. For this procedure you will need the following:


- | | |
|----------------------------------|---|
| (1) OLS 1-DUAL LED source | (2) test jumpers with 3 mm jackets and the same fiber type (62.5 or 50 µm) as the multimode link under test |
| (1) OPM 5-2D optical power meter | (1) ST-ST (mating) adapter |
| (1) ST adapter cap | |
| (1) 62.5 or 50 µm mandrel, | |

NOYES® Mandrels

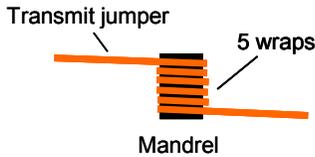


1 Attach Mandrel

Wrap the transmit jumper five times around the mandrel and attach it to the output port of the OLS 1 (LED source). Attach the ST adapter cap to the input port of the OPM 5 (optical power meter). Turn both units on and set wavelength to 850 nm.

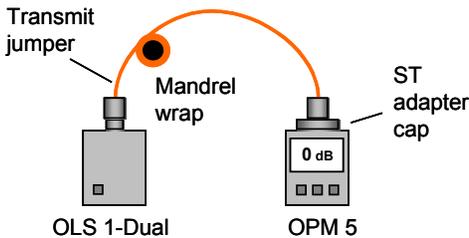


2 Set Reference (One Jumper Method)

Connect the output of the OLS 1 directly to the input (ST adapter cap) of the OPM 5. Then press and hold the Set Ref (set reference) key until the word "HELD" appears. When you release the Set Ref key the OPM 5 should display "0 dB" (+/- 0.05 dB) indicating that the power measured at output of the transmit jumper has been recorded as the reference level for your insertion loss measurements.

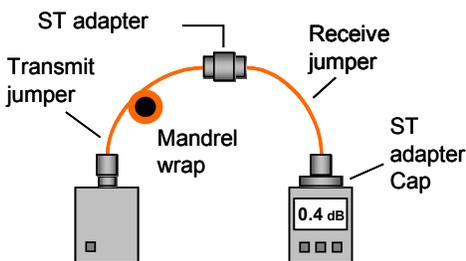

3 Check Jumpers

Disconnect the transmit jumper from the OPM 5 (be sure NOT to remove the end of the jumper connected to the OLS 1). Attach the receive jumper to the OPM 5. Mate the free ends of the transmit and receive jumpers using the ST-ST adapter. Verify that the insertion loss of this mated connector pair is well under 0.75 dB, the maximum allowed by the TIA. Noyes recommends that the loss of your mated test jumpers be 0.4 dB. If not, clean both jumpers and repeat steps 2 and 3.

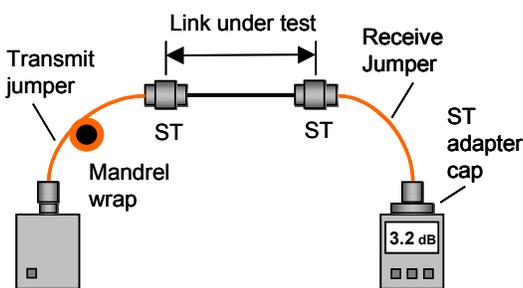

4 Test Links

Connect the OLS 1 and OPM 5 to opposite ends of the first link to be tested. Store the insertion loss measured by the OPM 5 by pressing the STORE key. You can repeat Step 4 to measure the insertion loss of each multimode link at 850 nm. Then, if required, set both units to 1300 nm and repeat Steps 2 thru 4 to measure the insertion loss of your multimode links at 1300 nm. The OPM 5 can store insertion loss results at 850 and 1300 nm for up to 500 fibers.

Authorized Channel Partner



NOYES®

United States
Customer Service
1.800.321.5298
1.603.528.7780
www.AFLglobal.com

Europe, Middle East, Africa
Max Penfold
Max.Penfold@AFLglobal.com
+44 1799 542 840
+44 7802 839 160

Middle East
Ahmed El Sakaty
Ahmed.ELSakaty@AFLglobal.com
+20 106 451 523

Africa (Sub Sahara)
Nicholas Cole
Nicholas.Cole@AFLglobal.com
+44 7702 005 590

Greater China
Dai Liu
Dai.Liu@AFLglobal.com
+86 133 1101 4533

Asia-Pacific (non-China)
Saw Biing Huei
Biing.Saw@AFLglobal.com
+65 9791 3398